

POSSUM LIMITED

8, FARBROUGH CLOSE
STOCKLAKE PARK INDUSTRIAL EST
AYLESBURY
BUCKS.
HP20 1DQ

TELEPHONE 01296 461000
FAX 01296 461001

email sales@possum.co.uk
WEBSITE http://www.possum.co.uk

InfoPager

Portable Receiver



User Guide



Connect Transmitter

- Alarm list
Preferences
Programming

Press 'arrow down' 4 times until the menu item 'Programming' is marked. Press 'OK'.
- Cancel
Add transmitter
Erase transmitter

Choose 'Add transmitter' by pressing 'arrow down' and then 'OK'.
- Press transmitter
OK = Cancel

Activate the transmitter you want to connect. If it is a portable transmitter Pulse, press the red alarm button.
- Choose text:
User alarm

Browse between the text alternatives by pressing 'arrow up' and 'arrow down'. When you have found the most suitable text, press 'OK'.
- Choose number:
0000 OK

Choose a number to identify the user, e.g. a room number. Move between the fields by pressing 'OK' and change the active field by pressing 'arrow up' or 'arrow down'. To exit, mark 'OK', press 'arrow down' and then 'OK'.

6



Assistance Alarm (Optional)

- Assistance alarm

Press and hold the OK button for 3 seconds until the text 'Assistance alarm' is shown. The alarm will now be sent to all other InfoPager units in the coverage area.

8

Enter Configuration

- Alarm list
Preferences
Programming

Press 'arrow down' 4 times until the menu item 'Programming' is marked. Press 'OK'.
 - Erase transmitter
Receive mode
Configuration

Press 'arrow down' 4 times until the menu item 'Configuration' is marked. Press 'OK'.
 - Cancel
One TREX
Many TREX

If there is only one InfoPager* in the installation, press 'arrow down' once and then 'OK'.
 - Cancel
One TREX
Many TREX

If there are more than one InfoPager* in the installation, press 'arrow down' twice and then 'OK'.
- *Please note: On the display, TREX = InfoPager. Always set to 'Many'.

7

Declaration of Conformity

We, Possum Limited, declare under our sole responsibility that our product InfoPager, NE10 04007-01, is in conformity with the directives 1999/5/CE, 73/23/CE and 89/336/CEE and conforms to the standards:



Safety: EN60950-1:2001
EMC: EN 301489-3 v1.4.1 Class I
Radio: EN 300220-3 v1.1.1

9

Contents

Overview	1
Important information	2
Getting started	3
Turn on InfoPager	4
Turn off InfoPager	4
Navigate in the menu	4
Enter date and time	5
Connect transmitter	6
Enter configuration	7
Assistance Alarm (Optional).....	8
Declaration of conformity	9

InfoPager User Guide
part number: 034-573 Iss:01
© Possum Limited, August 2008

Important Information



Always treat your product with care. Do not attempt to disassemble it, only Possum Limited authorized personnel should perform any service.



Do not expose your product to open flames, lit tobacco products or extremely high temperatures above 60°C.



This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be returned to Possum Controls for recycling. The recycling of materials will prevent negative consequences for the environment, human health and help to conserve natural resources.

Please note

For a rapid disconnection of the charger, the socket outlet will have to be easily accessible.

2

Turn on InfoPager

- ▶ Press the button 'arrow up'
- ▶ If InfoPager doesn't start or if it immediately turns off, please connect the charger to connector 11, see page 1.

Turn off InfoPager


- ▶ Press and hold the button 'arrow up' for three seconds until the display turns off.

Navigate in the menu

- ▶ Press the button 'arrow down' to enter the menu
- ▶ Press 'arrow up' or 'arrow down' to navigate in the menu
- ▶ To choose a menu item, press 'OK'
- ▶ To return to normal mode, choose 'Cancel' in the top of the menu list.

4

Overview

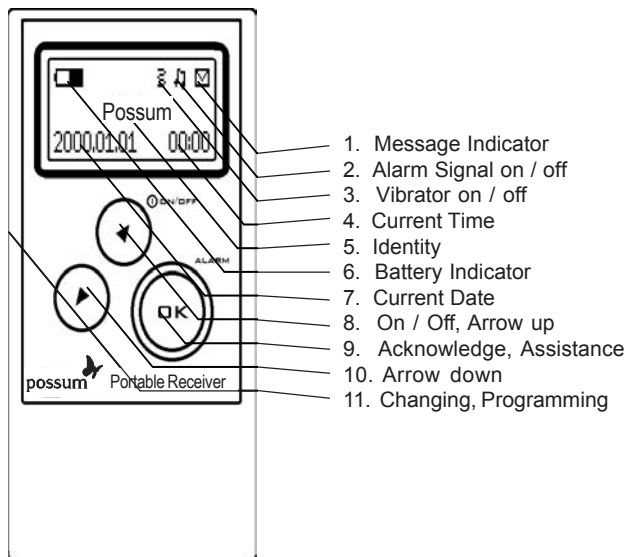

1

Getting Started


1. Connect the charger



2. Turn on InfoPager by pressing 'arrow up'



3. Wait until the battery charge symbol disappears

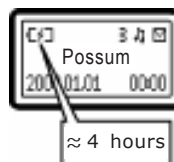

4. Remove the charger

3

 
Enter Date and Time




Press 'arrow down' 3 times until the menu item 'Preferences' is marked. Press 'OK'.




Press 'arrow down' 6 times until the menu item 'Date and time' is marked. Press 'OK'.



 Press 'arrow up' until current year is shown. Press 'OK'.



Press 'arrow up' or 'arrow down' until current month is shown. Press 'OK'. Repeat the procedure for day, time and minute.

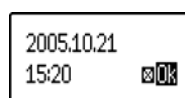

When the text 'OK' is marked and the time is correct, press 'arrow down' and then 'OK'. To change a field press just 'OK' and repeat the procedure from the beginning.

5